

## **FXII / MP5000 Phone Systems**

- To program the system clock for current date and time, you must be at a programming station usually the attendant station.

1. PRESS INTERCOM.

2. DIAL \*#0\*01.

3. DIAL 2-digits (01–12) for month.

4. DIAL 2-digits (01–31) for day.

5. DIAL 2-digits (00–99) for year.

6. DIAL 2- digits (00–23) for hour.

- Example: 8:15 PM = 2015 (enter 20 for hour).

7. DIAL 2-digits (00–59) for minute.

- Example: 8:15 PM = 2015 (enter 15 for minute).

8. DIAL # to save.

9. PRESS SPEAKER to end.