

## Attendant Station Programming

An Attendant Station User Program Menu Display is provided on the keyset LCD to assist you in programming the features and functions.

- After pressing the [Trans/Pgm] button, items are available by dialing the Program Code directly or by either using the [VOL ▲▼] buttons or the up/down navigation buttons to scroll through the keyset menu items.
- Dial pad keys are used to enter selected options.

Press the [Trans/Pgm] to enter the Attendant Station User Program Menu. The various levels of the display menu are indicated by indentation.

### [01] Print

#### [1] SMDR

- [1] Print SMDR (Sta Base) - enter station range
- [2] Delete Station Base - enter station range
- [3] Print SMDR (Grp Base)
- [4] Delete (Grp Base)
- [5] Display Call Charge
- [6] Abort Printing
- [7] Print Lost Call
- [8] Delete Lost Call

#### [2] Traffic

- [1] Print All Summary - select analysis time & type
- [2] Print All Periodic - enter print time
- [3] Abort Periodic Print
- [4] Print Atd Traffic - select analysis time & type
- [5] Print Call Summary
- [6] Print Call Hourly
- [7] Print H/W Usage - select analysis time & type
- [8] Print CO Summary
- [9] Print CO Group Hourly - enter CO Grp number

### [02] COS

- [1] Set ICM Only Mode - enter station range
- [2] Restore COS - enter station range

### [03] Authorization

- [1] Change Authorization - enter station

**[04] Date And Time**

- [1] Change (System) Date Time
- [2] Set Wake Up - enter station range
- [3] Disable Wake Up - enter station range
- [4] LCD Date Mode - DDMMYY or MMDDYY
- [5] LCD Time Mode
- [6] Use PX Time/Date
- [7] Monitor Conf-Room - enter room number (1-9)
- [8] Delete Conf-Room - enter room number (1-9)

**[05] Message**

- [1] Pre-selected Msg Act - enter station range & msg (00-20)
- [2] Preselected Msg Deact - enter station range
- [3] (Sys) Custom Msg Reg - enter station range & msg (11-20)
- [4] Erase VM Msg
- [5] Atd Del All CLI Msg

**[06] Rec. VMIB Announcement**

enter sys number (001-100)

**[07] Supplementary**

- [1] Cancel Features
- [2] Register Sta Name  
enter station number and name
- [3] Disable CO Outgoing - press CO flex btn (toggle)
- [4] Auto Ring Mode (1: day/2: night/3: on demand/4: weekend/5: auto ring mode)
- [5] ICM Box BGM Ch Sel - select BGM Src (0-8)
- [6] BGM to Ext Port #1 - select BGM Src (0-8)
- [7] BGM to Ext Port #2 - (Invalid)
- [8] BGM to Ext Port #3 - (Invalid)
- [9] Prepaid Call - enter station range, then enter money
- [\*] LCD Display Language - enter station range

**Overriding an extension in DND mode**

An Attendant can override a station in DND:

1. Call a station in DND(DND tone is heard).
2. Dial "\*" to override the extension. The station in DND will receive ring.